Niles Audio Corporation, Inc.

NILES

12331 SW 130 Street
Miami, Florida 33186

PO Box 160818
Miami, Florida 33186

Tel 305/238-4373
Fax 305/238-0185

PS-1

Phono/Auxiliary Line Level A-B Switch Hookup & Operating Instructions

The PS-1, a multipurpose A-B selector switch, is designed primarily to connect two turntables to a receiver or preamplifier that has only one phono input. However, the PS-1 may also be used to switch between any two line level sources such as compact disc players, tape players, or tuners.

TURNTABLE HOOKUP

Using RCA cables, connect the left and right outputs of the first turntable to the right and left "A" input and the left and right outputs of the second turntable to the right and left "B" input. With a third set of RCA cables, connect the right and left common of the PS-1 to the right and left PHONO input on the receiver or preamplifier. The ground wires of the turntables both connect to the ground terminal on the PS-1 and a single conductor wire from this terminal connects to the ground connection on the receiver or preamplifier (refer to figure #1).

LINE-LEVEL SOURCE HOOKUP

Using RCA cables, connect the left and right outputs of the first line level source to the right and left "A" input and the left and right outputs of the second line level source to the right and left "B" input. With a third set of RCA cables, connect the right and left common of the PS-1 to the right and left AUX input on the receiver or preamplifier.

OPERATION

Select the PHONO or AUX input on the receiver or preamplifier and using the front panel button on the PS-1, select the desired source.

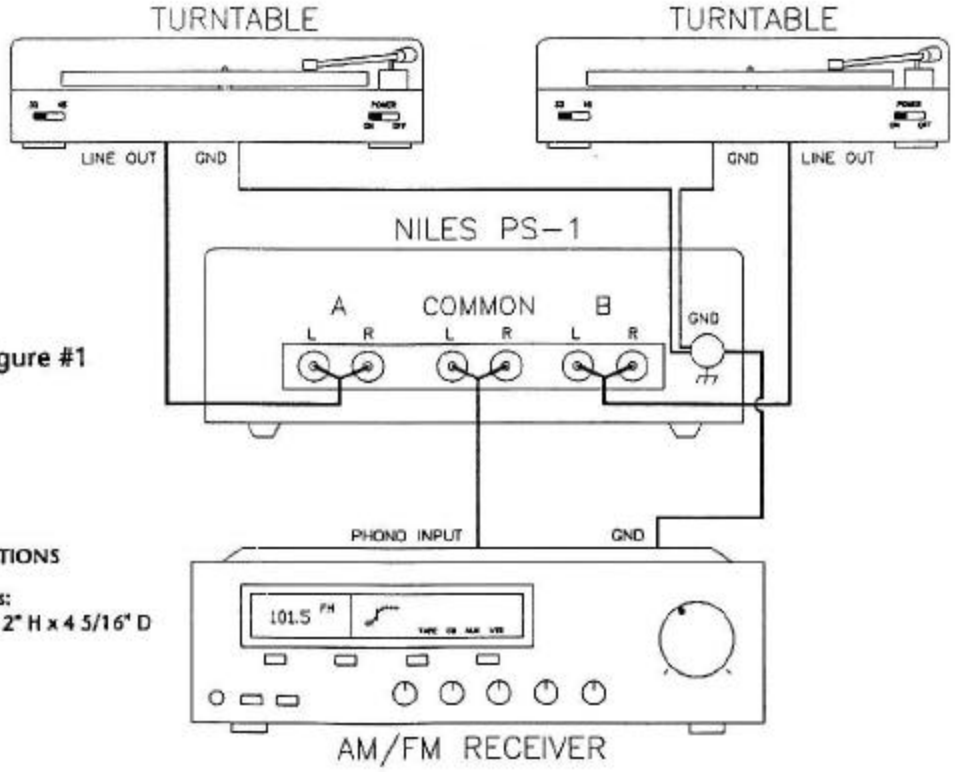

Figure #1

SPECIFICATIONS

Dimensions:
4 3/4" W x 2" H x 4 5/16" D

Weight:
1 lb.